

Date : 8/15/2023

SERVICE TECHNICAL INSTRUCTION

INSTRUCTIONS:

- If you lose function of your Trim, Key power (beep) at the switch, and Cranking ability.
- **1. Check the following:**
- Clean Battery Terminals
- Tight Battery Connections
- No Exposed Wires
- **2. Check the Clean Power Fuse** located on the STBD side above the Cranking Battery
- This is a 5 AMP Fuse that is easily accessible and easy to change
- A Replacement fuse should be Zip Tied right below the Fuse Housing
- **After the Fuse is changed, Verify:**
- Power to the Trim
- “Beep” when you turn the Key
- You will now have Cranking Ability to the Engine

